


ESP32 Connection Steps


1 – Install Thonny on your laptop: <https://thonny.org/>

2 – Connect the ESP32 to a USB port

3 – Start Thonny and select CircuitPython and the device ID in the lower right corner:

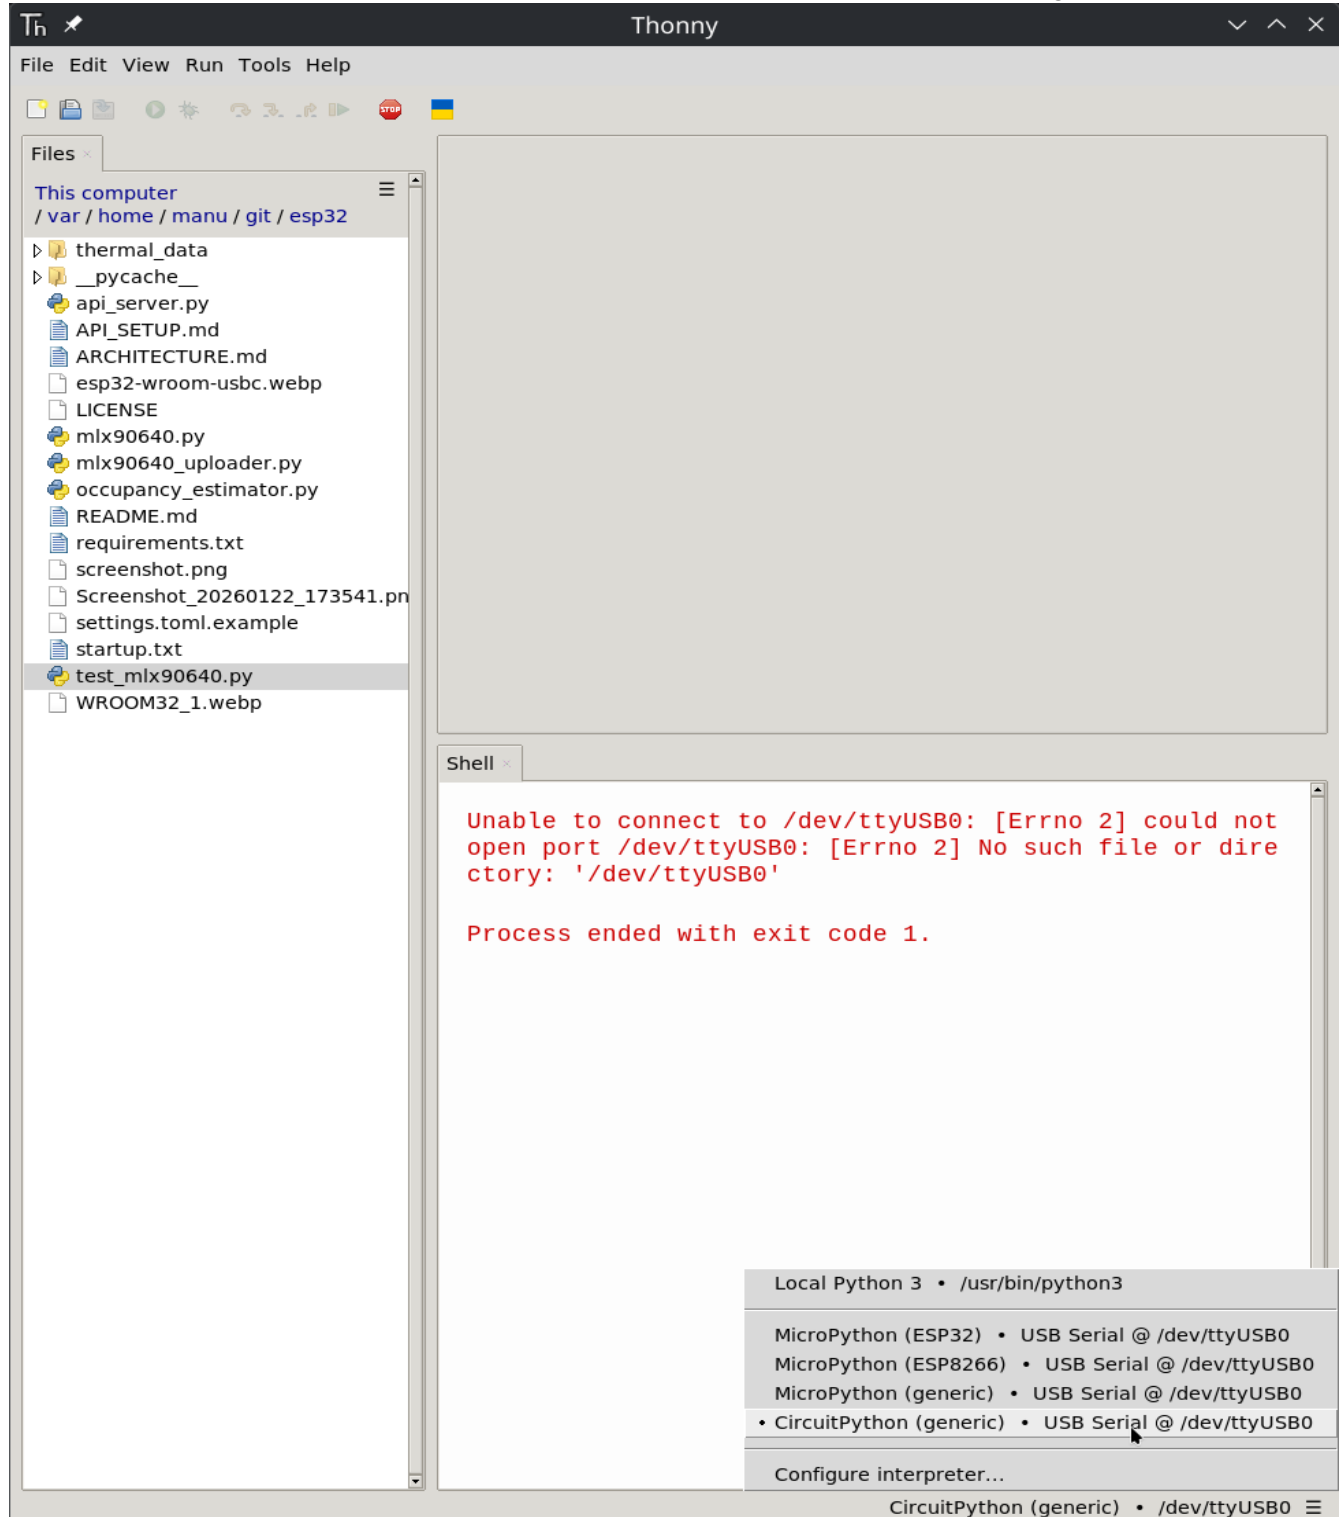

4 – The ESP32 should load a console and in the left sidebar there will be a “CircuitPython device” with code.py and settings.toml. Load settings.toml.

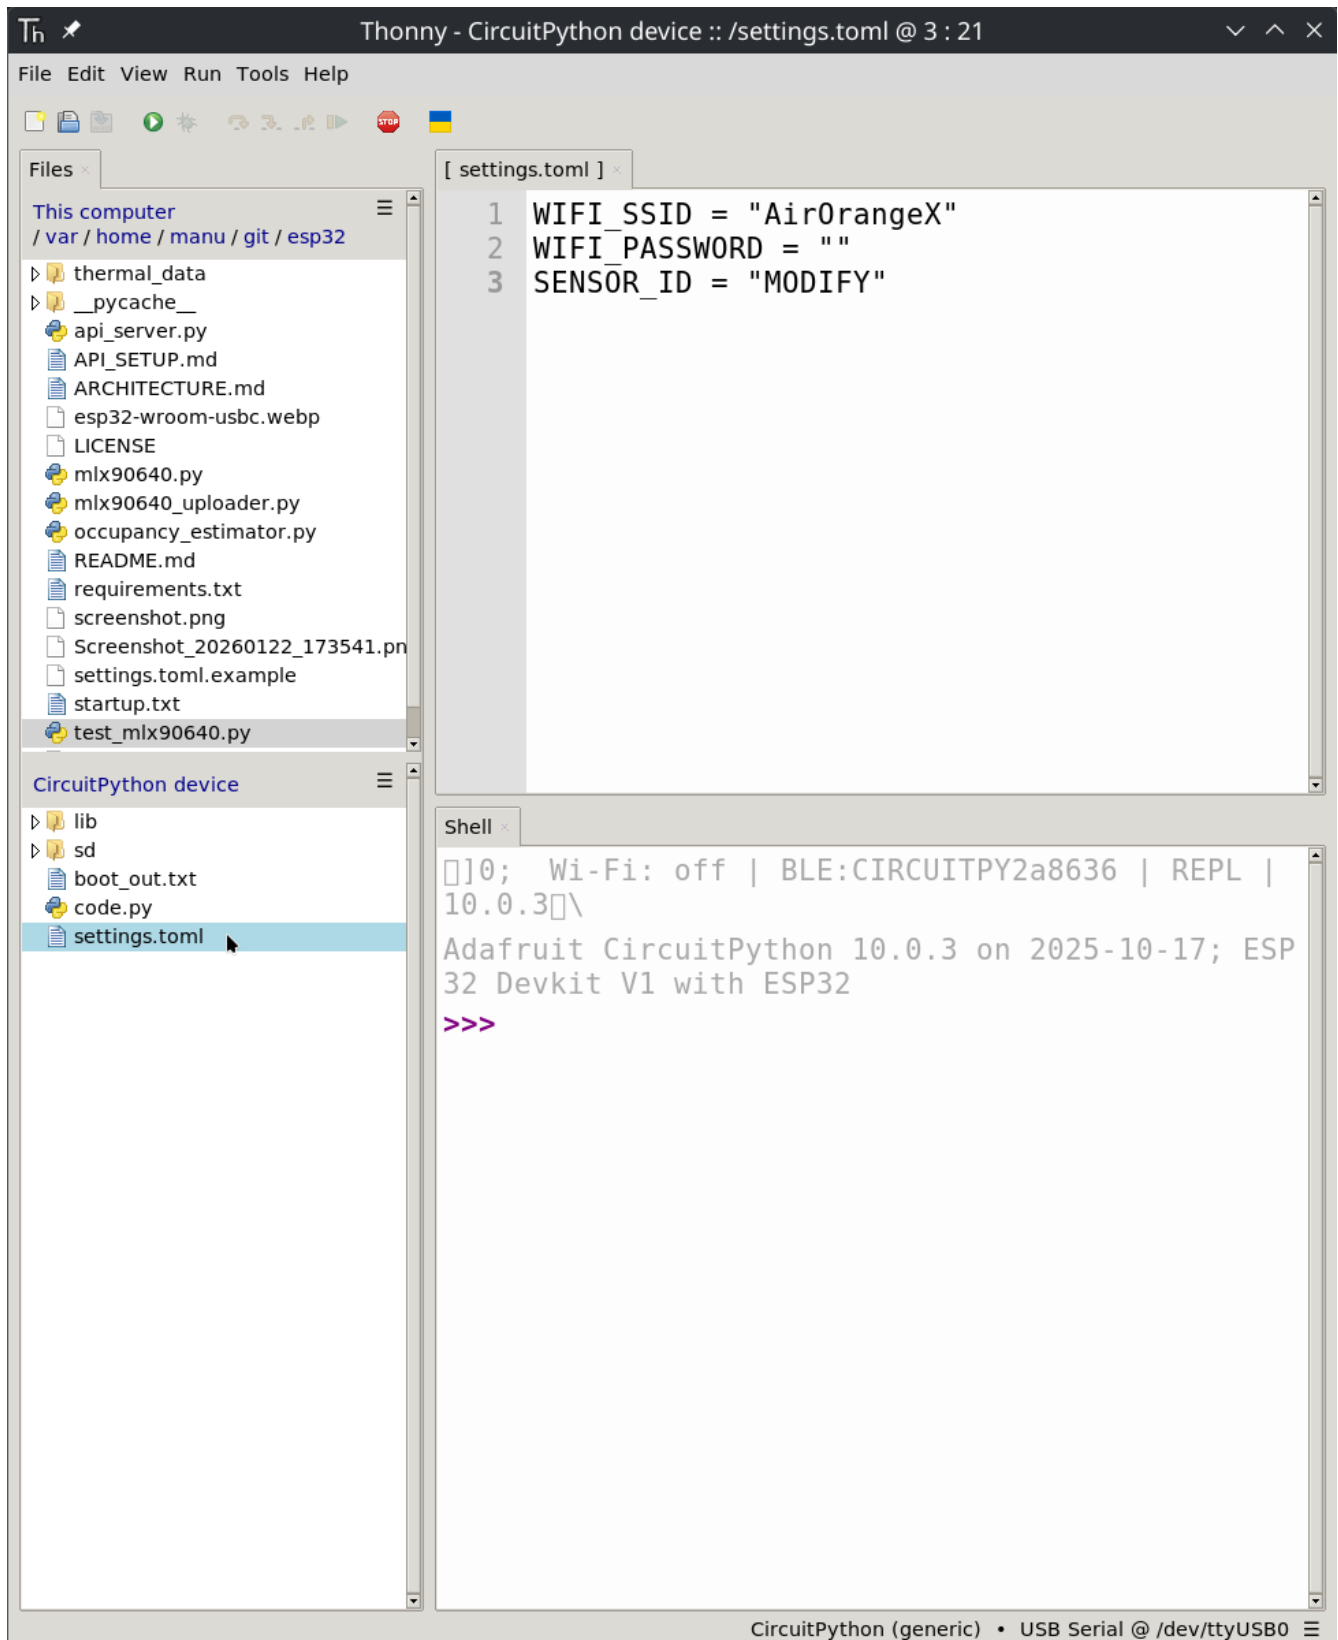

5 – Change the SSID and Password to connect to your wifi, and change the sensor ID to something specific to where the sensor will be installed. Save the file with ctrl-s or by selecting the save icon in the top left.

6 – Now load “code.py” from under the CircuitPython device in the left sidebar. Hit F5 or select the “run current script” icon from the top left to test that the ESP32 is able to connect and transmit. If something goes wrong here, try restarting the ESP by clicking the EN button near the USB-C port or by unplugging it. If it still doesn’t connect and transmit properly send me a message.